

PLICSMOBILE 80 series

Version, available since	Description
<p>1.1.0 3/2018</p>	<p>Function extensions</p> <ul style="list-style-type: none"> - Power saving function <ul style="list-style-type: none"> o The sensors are only switched on as long as necessary. This increases the battery lifetime. - New power scheme permanent operation/power saving mode (combined) <ul style="list-style-type: none"> o New power scheme where PLICSMOBILE decides on the active power scheme. - Battery/Accumulator warning message <ul style="list-style-type: none"> o PLICSMOBILE can send a warning message by falling below a battery/accumulator level. - SMS <ul style="list-style-type: none"> o In the SMS, the measured values selected in the measurement loop are transmitted. - Event log <ul style="list-style-type: none"> o Texts in the event log switched over to English. <p>Error corrections</p> <ul style="list-style-type: none"> - Percent and lin. percent in the VEGA Inventory System <ul style="list-style-type: none"> o Exchange of percent and lin. percent removed while transmitting to VEGA Inventory System. - Remote access via dialing connection CSD <ul style="list-style-type: none"> o Remote access via CSD is possible again. - 2. HART master <ul style="list-style-type: none"> o The use of a 2. HART master is now possible.
<p>1.0.1, 5/2017</p>	<p>Error corrections</p> <ul style="list-style-type: none"> - Software update <ul style="list-style-type: none"> o A software update without inserted SIM card is not possible - HART variables <ul style="list-style-type: none"> o While selecting the values to be transmitted there were transposed digits. Selected value to be sent -Actual value which is sent PV – QV SV – PV TV – SV QV – TV In addition, the units of SV, TV and QV were not sent. - Bluetooth <ul style="list-style-type: none"> o Was Bluetooth switched off and the instrument was switched off and on again, then PLICSMOBILE does not start correctly - Test transmission <ul style="list-style-type: none"> o During a test transmission with the key "Send" the sensor is switched on

Overview of the software versions

Version, available since	Description
	<p>for a sufficient time in the power saving mode</p> <ul style="list-style-type: none"> - Measured value transmission VEGA Inventory System <ul style="list-style-type: none"> o With a PLICSMOBILE with up to 15 measuring points, only the first 8 measuring point were sent
1.0.0, 4/2017	First sales version

Legend:

Name	Description
Version	<p>xx.yy.zz</p> <p>xx: Compatibility version. Will be increased when the compatibility to the previous version is no longer given. Value range 0 ... 99.</p> <p>yy: Function extension version. Will be increased when new functions or function changes were carried out on the previous version. Also errors can have been corrected with a function change. Value range 0 ... 99.</p> <p>zz: Error correction version. Will be increased when only errors were corrected on the previous version. Value range 0 ... 99.</p>
available since	Month/Year
Device Rev.	<p>Version number of the instrument defined by Fieldbus.</p> <p>Consecutive integral number</p> <p>Will be increased if in the "Application Layer" modifications were carried out. E.g. new commands, modifications in the data structure in a command.</p>